


## MC122 PRO

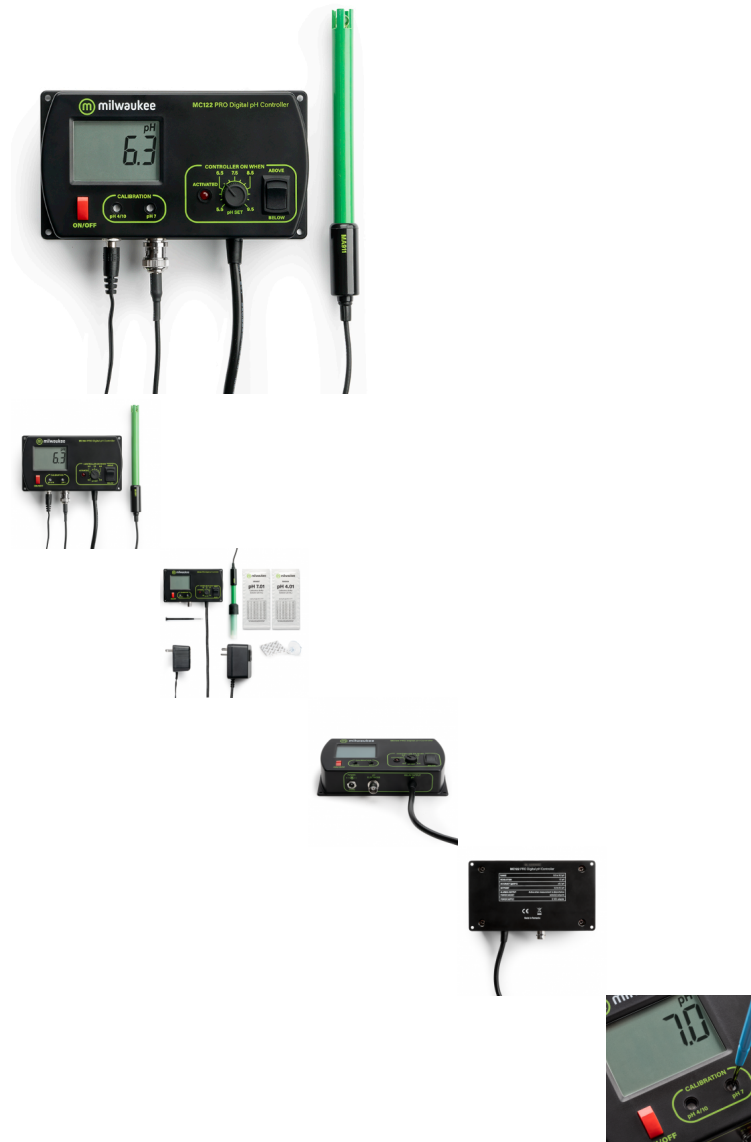

pH Controller

Rating: Not Rated Yet  
[Ask a question about this product](#)

Description

### MC122 PRO

With Milwaukee's MC Controllers you can monitor and control pH and/or ORP levels.

The Milwaukee Instruments "MC" Controllers have a user selectable set point and a visual "Power Activated" LED notification light. Power to the controller box is turned on when the reading is Above or Below ( user selected ) the selected set point. These MC Controllers are ideal for CO2 or ozone dosing.

With each Milwaukee Smart controller, your aquarium will have the individual attention that it needs.

Each unit comes with 12 VDC adapter, mounting kit, probe, probe holder and starter calibration solution for pH. (factory calibrated for ORP)

Professional pH controller especially designed for use with aquariums.

- User selectable Hi/Low Set Point
- Manual 2 points calibration
- Visual LED alarm
- Supplied with 12 VDC adapter and mounting kit
- Power plug for CO2 dosing
- Double junction pH electrode with 2m cable (BNC connector)

| Specifications       | MC122  |
|----------------------|--|
| Range                | 0.0 to 14.0 pH   |
| Resolution           | 0.1 pH   |
| Accuracy (25°C)      | ±0.2 pH  |
| Set point            | 5.5 to 9.5 pH  |
| Alarm                | active when measurement is higher or lower than selected set point |
| Output power socket  | relay, 230V / 117V; 8A   |
| Output               | active when measurement is higher or lower than selected set point |
| pH electrode         | MA911B/2   |
| Environment          | 0 to 50°C / 32 to 122°F; max RH 95%                                |
| Power supply         | 12 VDC power adapter (included)                                    |
| Power drivers        | 115VAC, 2A, 60Hz or 230VAC, 1A, 50Hz                               |
| Packaging dimensions | 276 x 129 x 138 mm   |
| Packaging weight     | 1.1 kg   |

**Accessories:**

- **MA911B/2** Double junction, gel filled pH electrode with 1 m cable
- **M10004B** pH 4.01 buffer solution 20 mL sachet (25 pcs)
- **M10007B** pH 7.01 buffer solution 20 mL sachet (25 pcs)
- **M10010B** pH 10.01 buffer solution 20 mL sachet (25 pcs)
- **MA9015** Electrode storage solution 20 mL sachet (25 pcs)
- **M10000B** Electrode rinse solution 20 mL sachet (25 pcs)
- **MA955** Solenoid valve with 1.5 m cable

**Ordering information:**

MC122 is supplied complete with MA9310 12 VDC adapter, MA911B/2 pH electrode, 20 mL pH4.01 sachet of calibration solution, 20 mL pH7.01 sachet of calibration solution, calibration screwdriver and instructions.